


Firmware installation method

WonderCam firmware need to be reinstall for factory setting or to obtain the latest system

It is user-friendly to update firmware using Windows 10 system recommended. In this lesson, 0.6.5.kfpkg firmware will be used as example to demonstrate.

- 1) Connect WonderCam vision module to one of the computer USB port with USB cable.
- 2) Open K-Flash software in the folder of 4. Firmware. If fail to open K-Flash, please install first and then run K-Flash.
- 3) Run K-FLASH software and then click button “...” to load the firmware.
- 4) Please set K-Flash software according to the following parameters:
 - Device: select the COM port that contains “USB-SERIAL CH340” on your computer
 - Baud rage2000000
 - Chip: In-Chip
 - Do not select "Open terminal after flash"

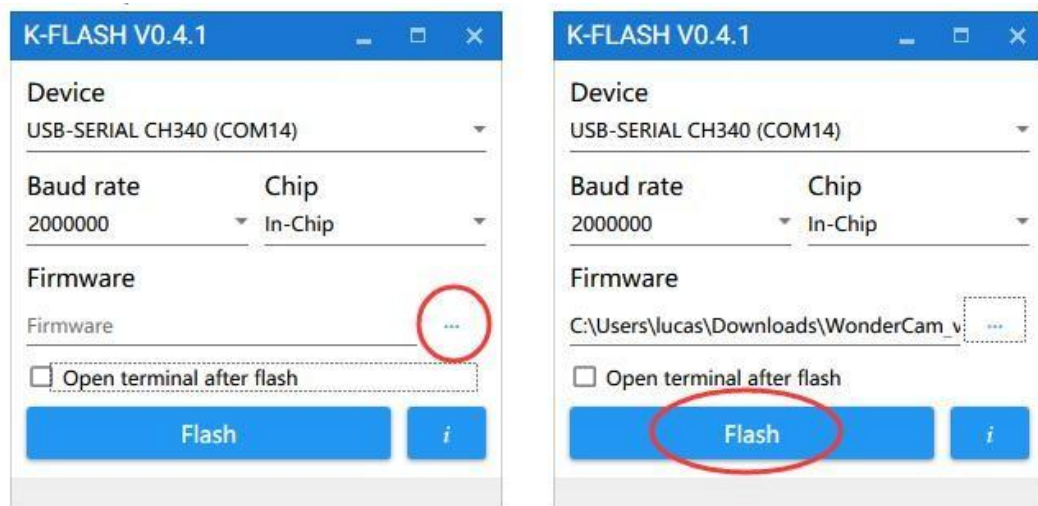

- 5) Click the button “Flash”. The firmware installation takes about 5 min. During downloading process, do not disconnect or change USB cable. WonderCam will restart after installation. Please set the system language to English.

